



CTT Locator User Manual

support@celltracktech.com

9/23/2021

Contents

The CTT Locator	1
Getting Started	1
In the Box	1
You will need	1
Prior to Assembly and Use	1
Tips Regarding CTT Locator's Battery	2
Assembly Instructions	2
Locator Buttons and Indications	3
Powering on the Locator	3
Parts of the CTT Locator	3
Screen Overview	5
Home View	6
Tag View	6
Identify View	8
Favorite View	8
Search View	8
Download View	8
Settings View	10
Importance of Shutdown	12

Localization Tips	12
Release Notes	12
Version 3.1.2 – Current release (9/22/2021)	12
Version 3.1 –	13
Version 3.0.1	13
Version 3.0	14
Troubleshooting Guide	14
Final Thoughts	16

The CTT Locator

The CTT Locator is a portal device that can receive a variety of wildlife tag signals. It is compatible with the entire radio tag line, including ES200 devices.

Getting Started

In the Box

- Yagi Antenna
- BNC to SMA coaxial adapter
- SMA coaxial cable
- CTT Locator with integrated Lithium Polymer battery and USB charger port

You will need

- Any smart device with a web browser (Mozilla Firefox or Google Chrome recommended) and WiFi capability (Android, iPhone, iPad, Laptop, etc)
- USB AC adapter or laptop to charge your CTT Locator
- Micro USB cable (Commonly called an Android charger cable)

Prior to Assembly and Use

Connect a Micro USB cable to the USB port on the CTT Locator. The USB port is located at the side of the device next to the power switch. This will start the charging process and top off the battery. The battery is fully charged when the red indicator light goes out and the blue light comes on. This can take several hours.

Tips Regarding CTT Locator's Battery

The locator features a lithium battery and does not have any memory effects. You can fully discharge the locator, charge the locator partially, keep it always connected to a charger, or even make use of an external battery pack (such as the type that charge cell phones).

That being said, it is important not to leave the CTT Locator's power switch on with a completely dead battery for long periods of time. This will eventually damage the battery and shorten its operating life.

Charging will be fastest when the device is switched to the "Off" position. The device can be used in the "On" position while connected to a charger, but it may take twice as long. If you wish to run the CTT Locator for very long periods of time, it is okay to leave the unit on and connected to a charger. However, you may notice the red and blue charge LED flicker when charging is complete.

For safety during transport, the battery is at a half charged state. While you can use the CTT Locator without fully charging the battery, you will not experience the full battery life until the unit is fully charged.

Assembly Instructions

Unpack the hand held yagi antenna from the packaging.

To assemble the antenna look at the diagram below. Pair the antenna sections by size, note that antenna elements will become longer incrementally as they approach the handle and that the coaxial connection is the second element from the handle. Screw them together like the diagram below.

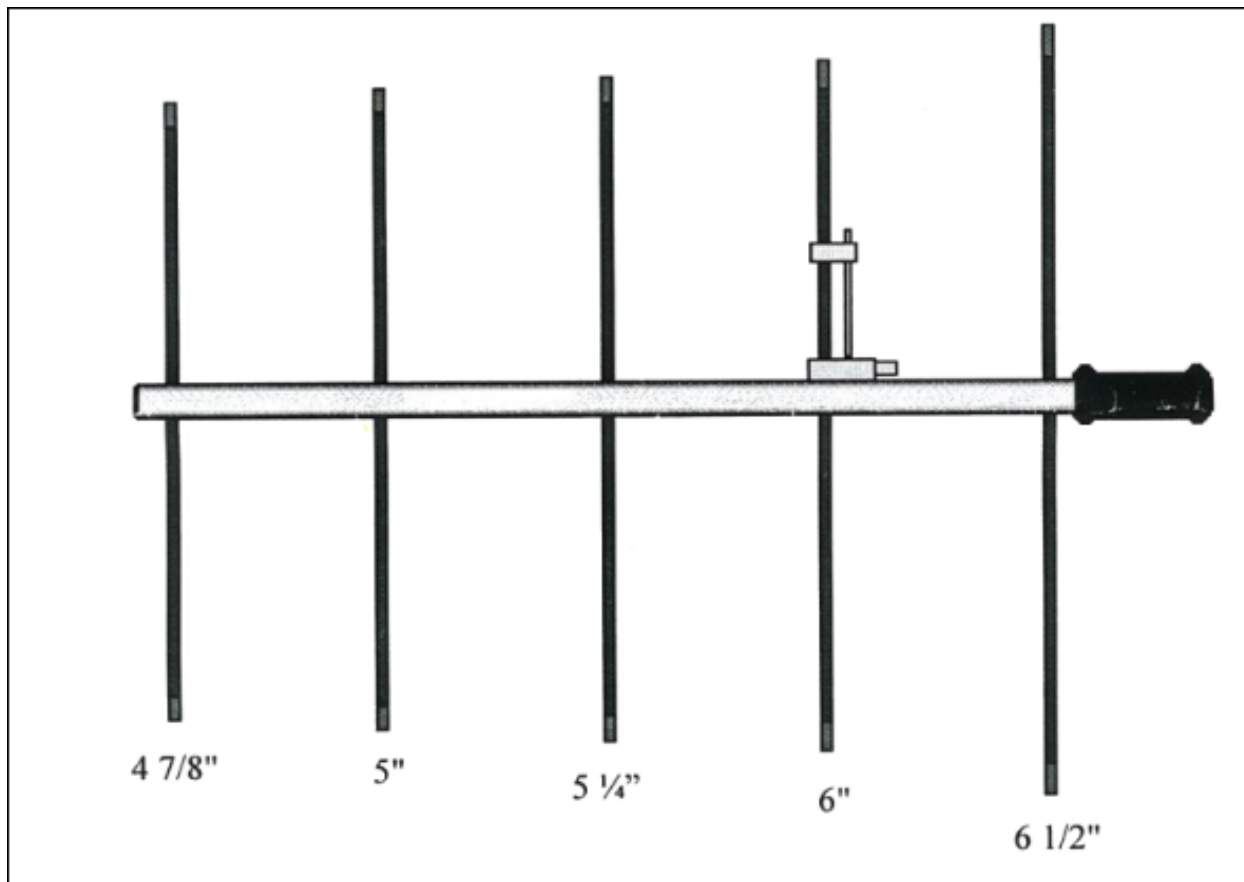


Figure 1: *Yagi Antenna*

Unpack the BNC to SMA adapter and twist the adapter onto the antenna BNC connector.

Connect the SMA coax from the BNC to SMA adapter to the CTT Locator, making sure that all the connections are hand tight. Do not overtighten using any tools, as this could damage the antenna connectors.

Unscrew the black hand nut and place the bolt through the hole next to the foam handle. Attach and tighten the black hand nut. Please not not overtighten the nut.

You may also attach your phone to the built in phone clip. Note that while the phone clip is sturdy, it may not properly hold your phone in all use cases. It is possible that some models of phones or operating conditions may cause the phone to fall out of the clip. Your phone may also be damaged if you inadvertently drop the locator antenna on the ground or in water. Use at your own risk.

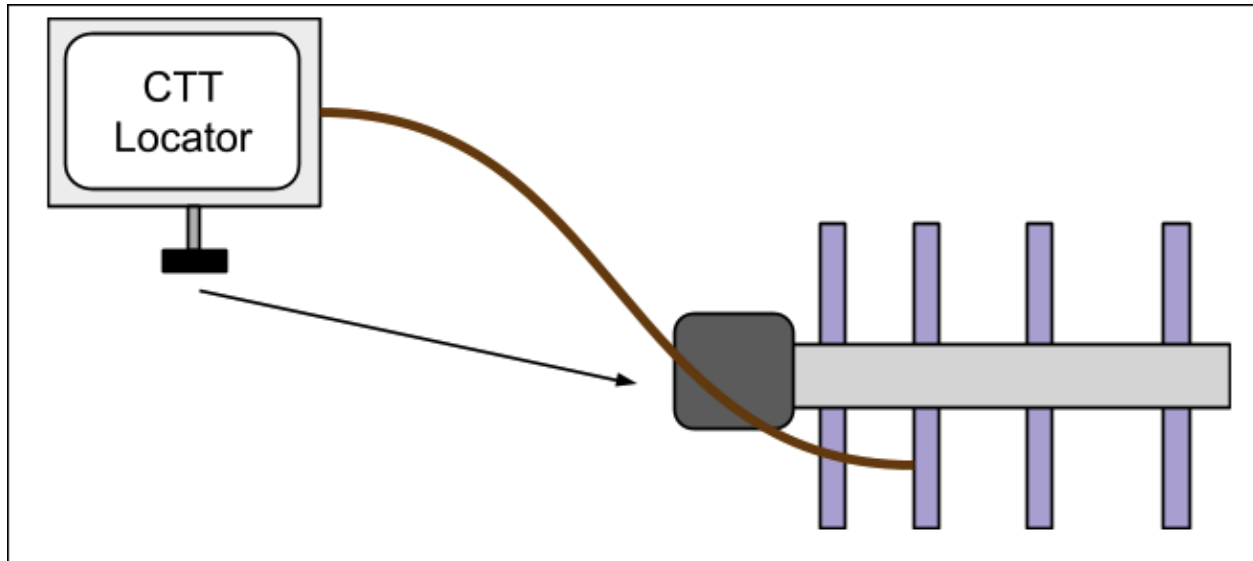


Figure 2: *Locator Setup*

Locator Buttons and Indications

Powering on the Locator

1. To power on the Locator, press the switch to on. A blue light will immediately shine, indicating the Locator has power. After a short bootup sequence, the Locator will create a hotspot for your phone to connect to. **Due to technical limitations, Android phones will need to turn off Cellular Data. This is not required on iPhone devices.** In addition to phones, the Locator can be used with laptops, tablets, and other modern devices.

When the blue light flashes, the Locator is in its final stages of booting. It will be ready in about 15 seconds after this indication.

2. Connect to a WiFi network created by the Locator.
3. Enter this full url into the browser. Note that the **https://** is important:

<https://locator.click/>

In a few moments, a webpage will load and show the main locator screen.

Parts of the CTT Locator

Indicator Light	Meaning
Power and Low Battery Indicator	Blue: The unit is turned on Yellow Flash: The unit has a low battery Dark: Off, No power is applied, dead battery, or when first switched on
Tag Detection Indicator	Red Flash: tag signal received and detected
Charging Indicator	Blue: Battery charged Red: Battery charging

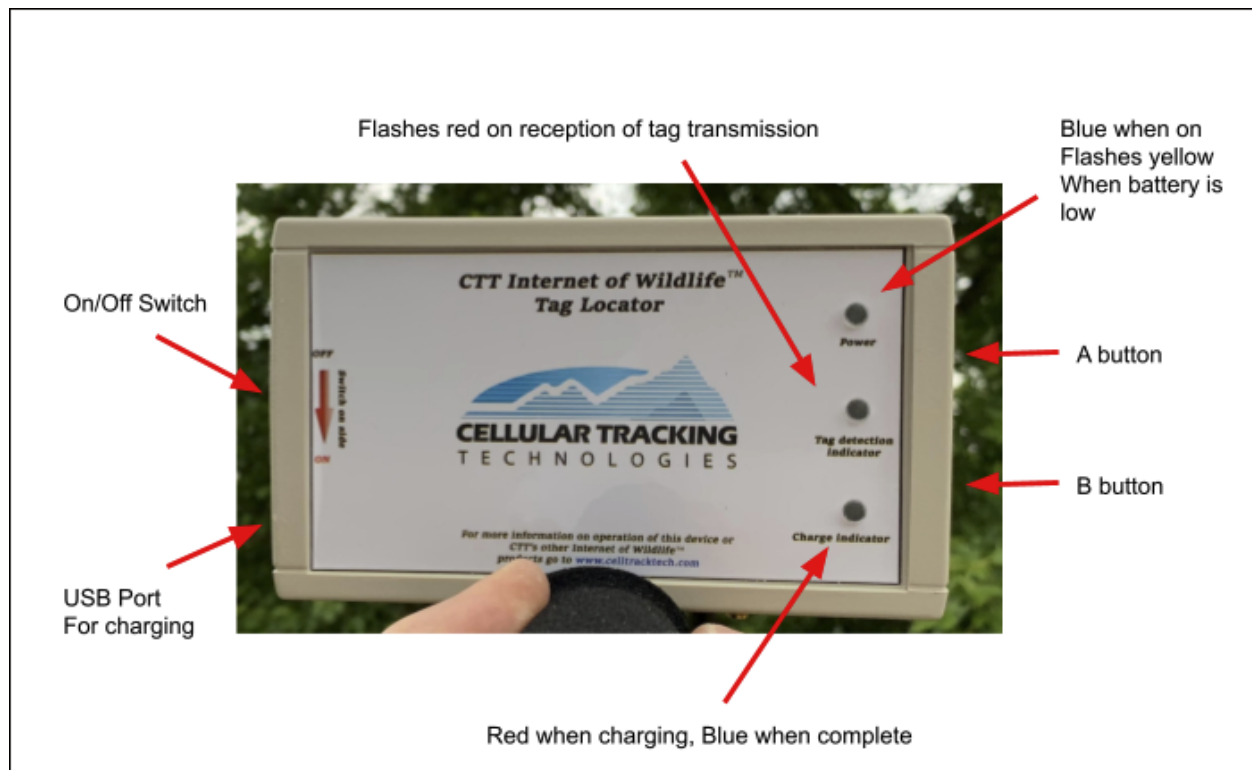



Figure 3: *Locator Diagram*

Port or Switch	Usage
Power Switch	Toggle switch to the left to turn the unit on. Wait a few seconds before usage.
USB Charging Port	Connect micro-USB cord to any computer USB port or USB wall wart to charge.
SMA Coax Connector	Connect the supplied coaxial cable to this port and the antenna connector on the back of the antenna. You will need to make use of the BNC to SMA adapter on the antenna.
Button A and Button B	For use with a future version of software or when instructed by CTT's support team. It is okay to inadvertently press these buttons.

Screen Overview

When you load the Locator screen, an interface will appear. You can change the various modes of the locator by clicking on the icons at the bottom.

First, we will go over the title bar:

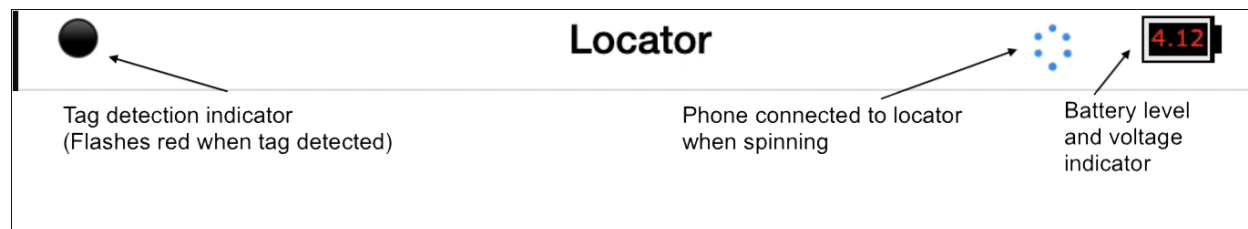

The circle on the right will flash red when a tag is detected. A rotating circle animation indicates that the locator is actively connected to the phone. The far right icon indicates battery life, and contains the voltage. Approximately 4.10 volts is a full battery, 3.7 volts is half full, and 3.4 volts is empty. This will also be indicated by the battery slowly reducing, similar to your smart phone.

Next we will go over the icons at the bottom:



- The **Home** icon shows all detected tags in a list, which is the default view when you first connect to the device. For more details, see the Home View section.
- The **Identify** icon helps you identify unknown tags or verify a tag's ID when it is in close range. For more details, see the Identify View section.
- The **Favorites** icon is a place where you can see the tags you have specified as favorites. This is useful when a lot of other tags are nearby and you wish to focus on a specific tag. For more details, see the Favorites View section.
- The **Search** icon is where you can search for tags within all of the tags recently detected during your session. For more details, see the Search View section.
- The **Download** icon allows you to download all collected tag data as well as ES200 data. For more details, see the Download View section.
- The **Settings** icon allows you to control various locator settings and options. For more details, see the Settings View section.

The signal strength next to the tag ID is measured in decibel milliwatts or dBm. This will always be a negative number, with -40 dBm being very strong (and within a few feet), while -115 to -120 dBm is typically the weakest signal possible to receive. This would indicate a signal coming from very far away or propagating through difficult RF conditions, such as heavy foliage.

Note: You can enable the tag “ping” sound on mobile devices by touching any part of the display, such as the top bar. Otherwise, it will be silent.

Home View

The **home** view shows all nearby tags. If a tag is first seen, it will show up as red, to indicate a new tag has been detected. If the tag is seen again, it will turn black. Each time the tag is detected, the text will briefly flash yellow to indicate it has been updated.

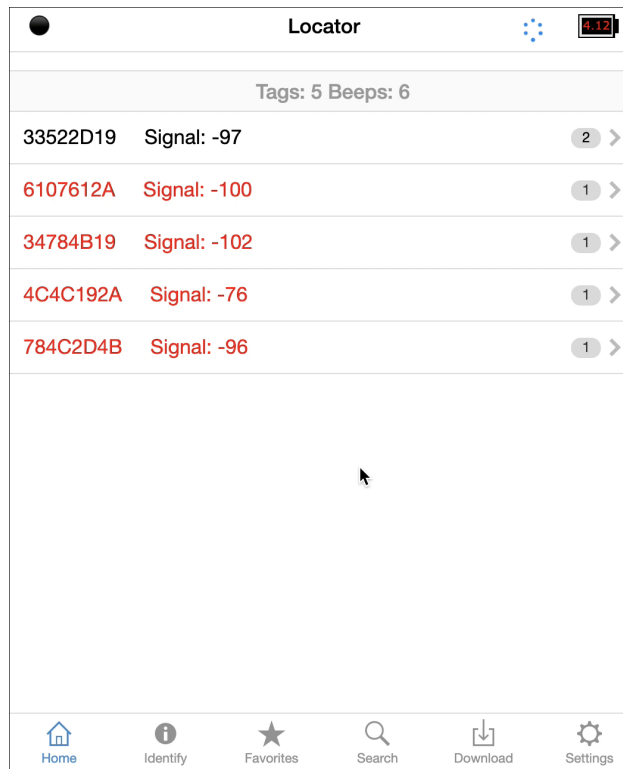


Figure 4: *Home View*

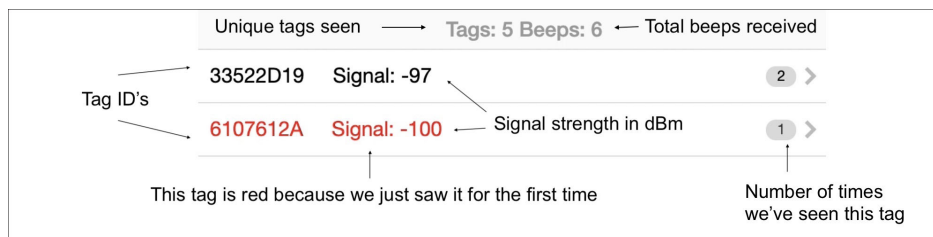


Figure 5: *Locator Main View*

Tag View

The **tag** view provides a signal strength indicator to help you localize a tag. As the tag signal gets stronger, more bars appear. the negative number under the signal bars is the signal strength in dBm, or decibel milliwatts. The lower the number, the weaker the signal.

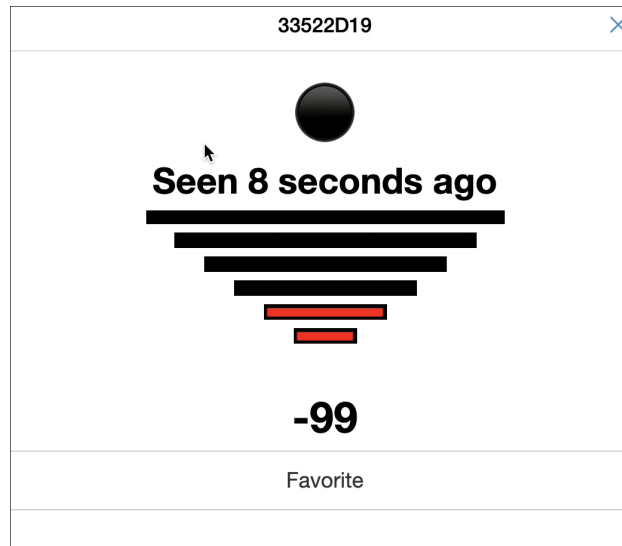


Figure 6: *Tag View*

A large circle is at the top of the Tag View. This flashes when the tag is received. Under this is the last time the tag was seen.

Touching or clicking the X in the top right corner closes the tag view.

You can add a tag to your favorites list by tapping the “Favorite” button. Tapping this again removes the tag from your favorites.

Identify View

In the **Identify** view, tags will appear if they have signals stronger than -30 dBm. This would be a tag in very close proximity to the locator.

Favorite View

Any tags that are selected as favorites will enter the **Favorite** view. You can click on any tag here to see the Tag View of any tag in this list, just as you would in the main view.

Search View

The **Search** view lets you type in a tag ID, which is then searched against tags detected during that session. Note that the history of tags clears each time you open or reload the locator interface. It will not search against any tag ever detected with the locator.

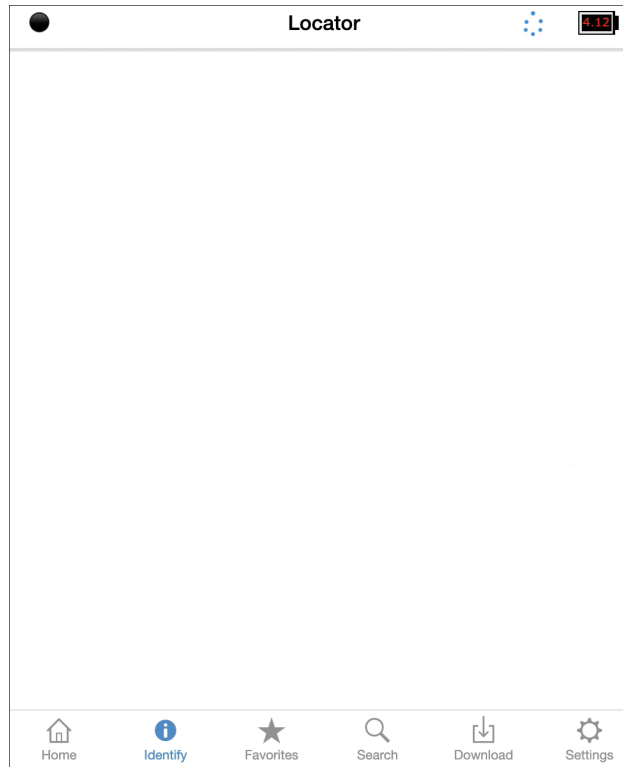


Figure 7: *Identify View*



Figure 8: *Favorite View*



Figure 9: *Search View*

Download View

The **Download** view is where you can download both ES200 and Tag Data. Clicking on these will initiate a download to your device.

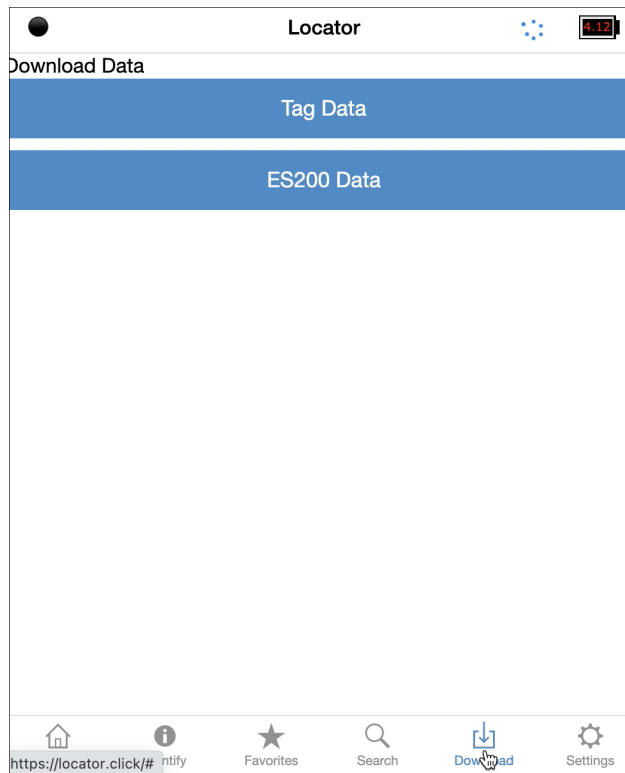


Figure 10: *Download View*

Settings View

The Sound options allow you to enable or disable the ping sound. Signal based volume will slightly adjust sound levels to indicate signal strength (not all phones support this feature).

WiFi network settings allow you to configure a local WiFi network. This is useful for software upgrades as well as accessing the locator while it is connected to a local WiFi network, such as an information TV display.

WiFi Access Point mode, switching to off, will disable the hotspot functionality and allow it to connect to a local network. This is not required for software updates.

The locator will then respond to <https://locator.local/>


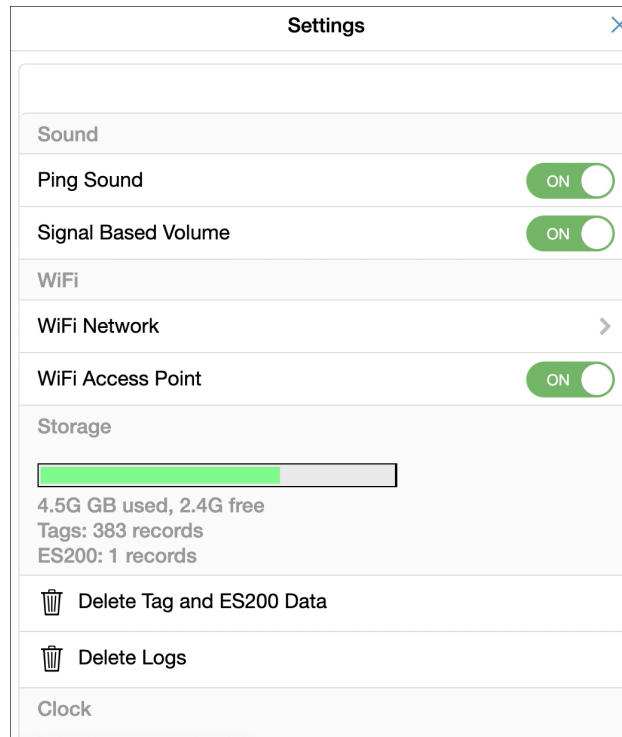


Figure 11: *Settings View*

Storage indicates space left on the locator. Note that the operating system and locator software do take a majority of the space on the device, which is normal. There is enough space for several million tag reads. The record count and space used is updated about every 15-30 seconds.

Clicking delete logs clears out the system logs. While clicking delete tag and ES200 data will permanently delete tag logs.

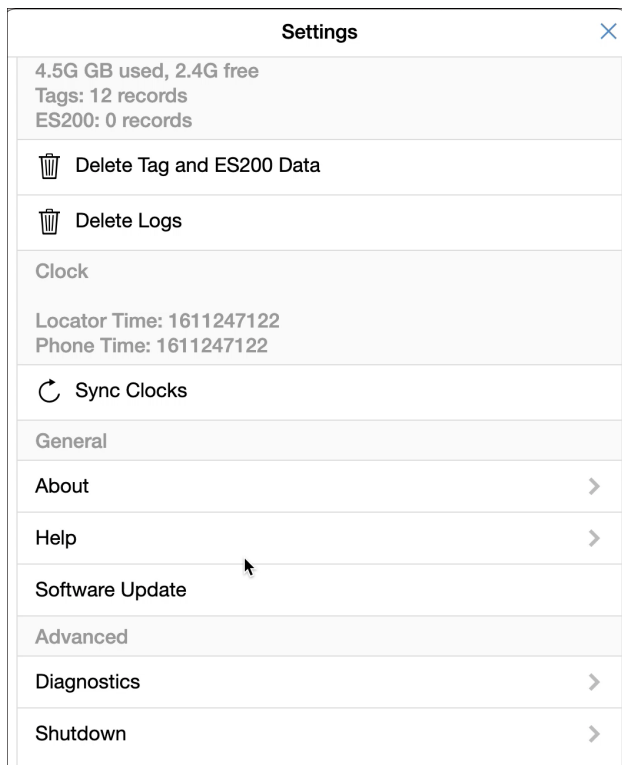

The **clock** is the current seconds from 1970, also known as the epoch time. You will want to make sure these are about the same. If they differ, click “sync clocks”. Due to the nature of how time is indicated from your phone, a difference of 1 second is normal, as the actual time is rounded.

About will tell you information about your locator, such as version. **Help** is where future help and videos will be stored on the locator.

Software update updates the locator to a new version of software. Note it is not advised to do this unless instructed by Cellular Tracking Technologies.

Diagnostics will provide technical hardware information that is sometimes useful for technical support.

Importance of Shutdown

When you are finished using your locator, it is important to click shutdown. This shuts down the locator gracefully and avoids data loss of the most recently detected tags. While switching off the Locator will not damage the unit, it is always best to use this when possible before switching the Locator off.

When the lights turn off, your locator is now safe to be turned off.

Localization Tips

Before going out in the field, it helps to practice localizing a tag. Here are a few tips in finding a tag:

- Hold the antenna away from your body and from obstructions. Since most wildlife tags are horizontally polarized, make sure the elements on the yagi are horizontal.
- Hold the yagi parallel to the ground, even with tags in flight.
- For some reptile and mammal tags, the antenna is pointing upward. Likewise, you may want to try to hold the yagi in a vertical position to see if signal improves.

- On your first reading with a steady signal, rotate slowly to identify the initial bearing of the tag. You may want to make two full rotations to verify direction. Once you master this technique, you can scan side-to-side for faster localization.
- Note the direction on a compass and map, while noting the time. Although the magnetometer will log the data, it is sometimes helpful to collect data separately.
- Move in the direction of the tag and rotate the antenna left and right to keep on track.
- You may want to surround the potential tag location by taking additional samples.
- Keep a look out for reflections and multipath! Much like visible light, signals can bounce off bodies of water, buildings, and other smooth surfaces.

Release Notes

Version 3.1.2 – Current release (9/22/2021)

New Features

- Checkbox shown next to verified tags (CRC tags)
- Configurable sounds, settings saved to each user
- New software update tool
- Can use multiple WiFi networks at the same time

Fixes/Improvements

- Fixed HTTP to HTTPS redirect
- Improved UI handling in settings menu
- Fixed bug scanning WiFi networks under certain circumstances
- (Hopefully) fixed websocket bug where only one beep was sent before the beep emitter failed, improving stability
- Switched to new CRC library
- System auto-configure scripts now appearing in rc.local to aide in build process

Known Issues

- WiFi can become a little slow if AP channel does not match locator channel (this is handled after reboot, but multi AP networks can still be problematic)
- iPhone complains about WiFi network not having internet access sometimes
- WiFi config has to be “reset” in order to get unique SSID

Version 3.1 –

New Features

- GPS positioning now back in tag log (will use most recent GPS from any user if multiple users connected)
- Ability to download GPS position log
- GPS log supports multiple users, each track from unique ID
- Each user has a unique ID that is available under “about”

Fixes/Improvements

- Operating system upgraded to latest release
- Locator software now running as service
- Refreshed SSL certificates
- Migrated to new hotspot software
- Removed operating system disk usage from disk space free graph

- Removed log file start header

Version 3.0.1

New Features

- Locator power light now appears immediately when Locator is switched on
- Power switch off feature for safer handling of SD card

Fixes/Improvements

- Software version correction (properly displays 3.0.1)
- WiFi now running as a service, preventing AP startup failures
- Removed errant Raspberry Pi Desktop from spawning
- Shutting down WiFi stops dnsmasq and hostapd services
- Faster boot times

Known Issues

- Sometimes clicking tag from “favorites” does not update the tag id in the modal
- On rare occasion, a favorite does not stay persistent
- On rare occasion, websocket stays connected, but tag emitter seems to fail
- Tag ID signal threshold fixed to -39 dBm or stronger
- ES200 data stored in raw form (no local decoding)
- I2C scan doesn’t fit on some smaller displays
- LED testing function not included
- Browser based heading and accelerometer functions removed
- No help documents and videos created
- Scrolling lacks rubberbanding effect
- Attenuator removed due to javascript/css issue

Version 3.0

New Features

- 100% new single page front end
- Websocket stability enhancements
- Device preferences specific to device (using localStorage)
- New “home”, “identification”, “favorites” and tag search functions
- Tags are counted on a per tag basis and total tags seen
- New reference tag diagnostics screen
- Queries radio firmware version (1.0.0 contains ES200/checksum tag support)
- WiFi Hotspot disable feature enters client mode
- Real time data collection statistics in settings screen
- Faster load times
- Websocket connection indicator
- Signal based volume
- Ping sound can be enabled/disabled
- Future help section
- New Ratchet framework

Known Issues

- Sometimes clicking tag from “favorites” does not update the tag id in the modal
- On rare occasion, a favorite does not stay persistent
- On rare occasion, websocket stays connected, but tag emitter seems to fail

- Tag ID signal threshold fixed to -39 dBm or stronger
- Rose graph removed
- ES200 data stored in raw form (no local decoding)
- I2C scan doesn't fit on some smaller displays
- LED testing function not included
- Browser based heading and accelerometer functions removed
- Software version misleadingly indicates 2.5
- Scrolling lacks rubberbanding effect
- Attenuator removed due to javascript/css issue

Troubleshooting Guide

Symptom	Cause	Solution
Unable to connect phone to base station	Not waiting long enough for initial boot Not connected to WiFi hotspot Battery is dead Mobile data service not disabled (Android Only)	Wait 2 minutes before trying to connect Check WiFi settings for "Locator (serial number)" connectivity Charge battery Follow android phone instructions for disabling data service
"Low Battery" sign appears or yellow light flashes	Battery is close to being dead, but you will still have some time left.	Charge battery
Not detecting tags, some tags missing	Antenna cable not connected Antenna cable damaged Tags not transmitting	Connect Antenna Replace antenna cable Read instructions for LifeTag and PowerTag usage
Can't access internet	LifeTag base station's hotspot overrides phone internet connection	Disconnect from WiFi Android users should re-enable their mobile data service
Expired Certificate Error	The certificate on the Locator must be updated	Follow the directions below

Directions for updating an expired certificate only if you are receiving an expired certificate warning when attempting to connect your phone or device to the Locator.

Fix Date: March 11, 2022

Windows

Connect to your local internet

Open PowerShell

- Go to: `command -> Run`
- and type in: `powershell`

To download the update, type in:

```
wget http://ctt.works/update.txt -outfile update.txt
```

Now connect to the Locator WiFi

To copy over the update, type in:

```
scp update.txt pi@10.1.1.1:/home/pi/locator.crt
```

When prompted for a password, type in:

```
celltracktech1
```

(note that you will not see any text response when you type in a password)

Then, finally, send the locator the instructions to reboot and install the update:

```
ssh pi@10.1.1.1 "sudo reboot"
```

When prompted for the password, type in:

```
celltracktech1
```

Your locator now has received the new certificate update to operate again normally.

Mac OSX or Linux

Connect to your local internet

Open **Terminal** * On Mac OSX, click the search magnifying glass in the top right of the menu bar and type in **terminal**

To download the update, type in:

```
curl http://ctt.works/update.txt >update.txt
```

To copy over the update, type in:

```
scp update.txt pi@10.1.1.1:/home/pi/locator.crt
```

When prompted for a password, type in:

```
celltracktech1
```

(note that you will not see any text response when you type in a password)

Then, finally, send the locator the instructions to reboot and install the update:

```
ssh pi@10.1.1.1 "sudo reboot"
```

When prompted for the password, type in:

```
celltracktech1
```

Your locator now has received the new certificate update to operate normally.

Final Thoughts

This User Guide is a living document. Your experiences and input are greatly appreciated so please don't hesitate to reach out to us regarding what you'd like to see included here. You can submit your suggestions and any errors to our **Customer Service Desk** here and we will work to incorporate them in future revisions. All material © Cellular Tracking Technologies, 2021.